

WR MAGAZINES FAMILY

- SINGLE ROUND LOADING BLOCK (SRLB) – ALL MODELS AND VERSIONS



DESCRIPTION: The factory magazine and your WR magazine may be used to single feed rounds into the chamber. However, this process may not be as smooth a process as may be desired. The WR SRLB is a solution to convert your rifle to a single shot giving smooth loading, removing projectile damage risk and remove accuracy affecting harmonics.

SPECIAL FEATURES:

- Made to fit the standard off shelf stock configuration without modification (drop in fit).
- One size fits all – the same block in a given model will suit all cartridges.

EQUIPMENT NEEDED: - Nil. Simply fit and use.

POSITIONING: - Replaces the functioning magazine as a solid single unit.

FITTING:

- Remove the magazine.
- Insert the WR SRLB and press to click in place.
- The removal is the same as a magazine, by depressing the release lever.





ADJUSTMENTS:

There should be no adjustments required, however some stocks may shrink or swell.

Changing the height of the floorplate is not recommended, as the same rifle configuration should work with the repeating magazine.

Simply remove material from bottom of the mag latch tang in 0.1mm increments until the SRLB clicks in.

NOTE: The SRLB should be tight...to maximise the benefits of single round loading the rifle.

TESTING:

- A simple dry bench test should suffice using dummy rounds.
- Dry fire activities in different simulated field shooting positions to ensure correct function.
- Ensure the bolt can cycle and not interfere with the top of the SRLB.
- Be sure rounds feed accordingly, without binding, jamming, etc.

SUGGESTION: Use while barrel cleaning, to assist preventing contaminants and materials entering the mag well.

SERVICING & MAINTENANCE: Keep the SRLB clean. Wipe down with a basic cleaning fluid.

SPARE PARTS: www.watersrifleman.com with any enquiries.

*** End ***